# **Release Notes**

V3.0.59

### **Bug fixes:**

Overexposure with a low probability during taking pictures

#### V3.0.58

### **Bug fixes:**

 Resolve the issue that the camera shows a "white screen" when it turns on at very low probability.

#### Others:

• Typographic modification on MENU > Version

## V3.0.53

#### **New features:**

- Added an option "Delete All" for removing all of photos and videos
  when reviewing photos or videos on the camera (Tip: When camera is
  powered on, here is the way to get the option: press OK to review photos,
  then press RIGHT button, there are 2 options Delete current one and
  Delete all)
- "Operation Hours" supports AM/PM format

## **Bug fixes:**

- Corrupt files those might cause freeze when reviewing photos on camera, or those aren't viewable on computer. Please format your SD card to remove the corrupt files after firmware is upgraded.
- SD card is unrecognized. If it is, please format your SD card firstly per the doc from link: <a href="https://www.meidase.com/wp-content/uploads/2021/09/How-to-fix-SD-card-issues-v1.pdf">https://www.meidase.com/wp-content/uploads/2021/09/How-to-fix-SD-card-issues-v1.pdf</a>, then upgrade your camera.
- Abnormal playback on iMovie on Mac computer, or on Windows Media Player

- Eliminate: pitch when night recording, screen flickers
- Other minor changes for more stability